



NOTE: BOTTOM CORNERS ARE TO BE INSTALLED IN THE RABBET OF THE FRAME NEXT TO THE FLOOR AND STOP ON BOTH THE HINGE AND STRIKE JAMBS.

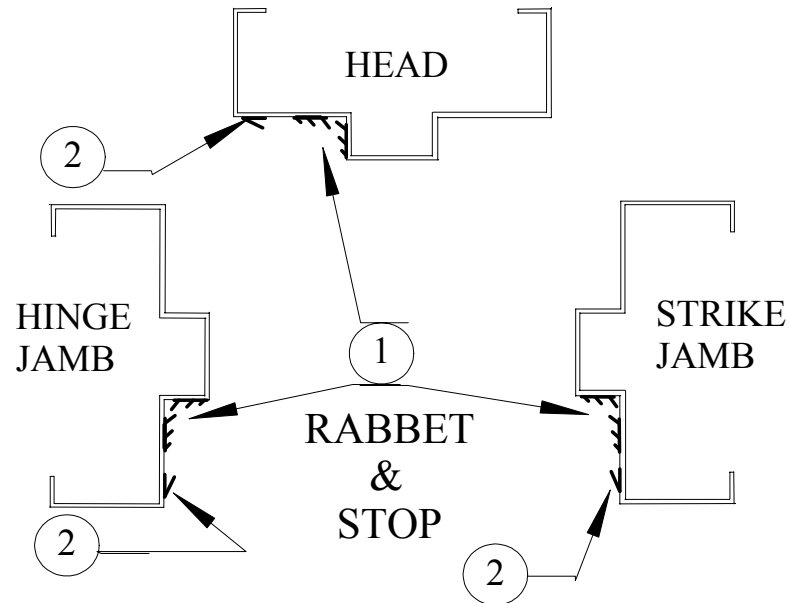

ITEM NO.	DESCRIPTION SEAL SET NO. 16		
1	PEMKO	S773	2 SETS ADHESIVE GASKETING
2	PEMKO	S44	ADHESIVE GASKETING
3	ACP	112	BOTTOM CORNERS
4	PEMKO	PDB 411 AE	MORTISED AUTO DOOR BOTTOM

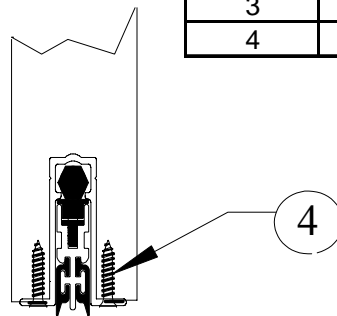

NOTES;

1. THIS DRAWING REFERS TO SEAL ORIENTATION ONLY.
2. REFER TO SEAL MANUFACTURERS INSTALLATION INSTRUCTIONS FOR APPROPRIATE INSTALLATION TECHNIQUE AS DETERMINED PER SEAL BEING USED.
3. DRAWING NOT TO SCALE.
4. OSHKOSH DOOR COMPANY RESERVES THE RIGHT TO CHANGE DESIGN AND / OR DETAILS OF ITS PRODUCTS WITHOUT NOTICE.

OSHKOSH
Door Company

FOR MORE INFORMATION
CALL 920-233-6161

DETAIL DRAWING SHEET

DD616

Gasket Set 16

Date: 8/2013

SHEET OF