

# OSHKOSH

*Door Company*


www.oshkoshdoor.com

## INSTALLATION INSTRUCTIONS FOR EXTERIOR DOORS


The following instructions must be strictly followed in order to maintain exterior door warranties.

1. Prior to installation doors must have two coats of an exterior grade sealer and two exterior grade topcoats applied to all six sides. Sealers and topcoats must extend into all cutouts such as hinge, lock, light, etc.
2. Flashing must be installed on the top of the door as well as the bottom of all vision light openings.
3. All vision kits, hardware and flashing must be installed with an exterior grade sealant applied in a manner that will prevent the intrusion of moisture to inner parts of the door.
4. Overhangs must be provided so that doors are protected from direct exposure to the elements such as direct sunlight or rain.

## PROPER INSTALLATION OF FLASHING AT THE TOP OF THE DOOR

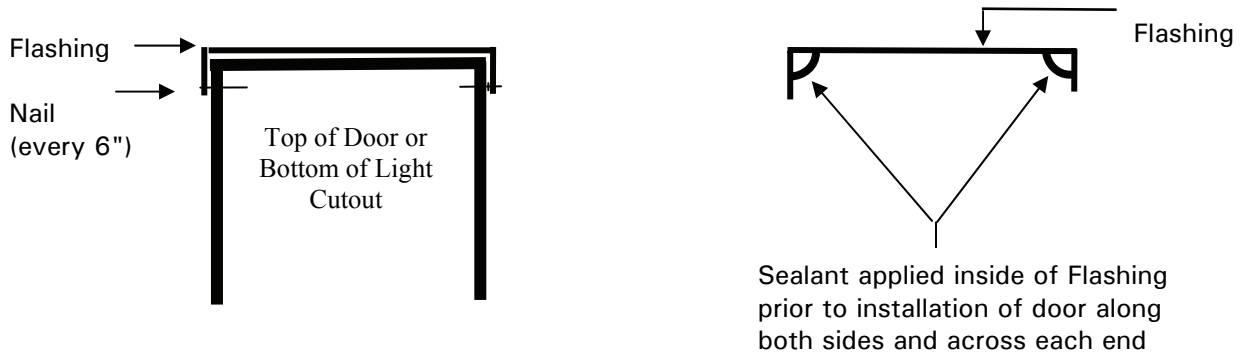

## PROPER INSTALLATION OF EXTERIOR VISION KIT WITH WOOD STOPS

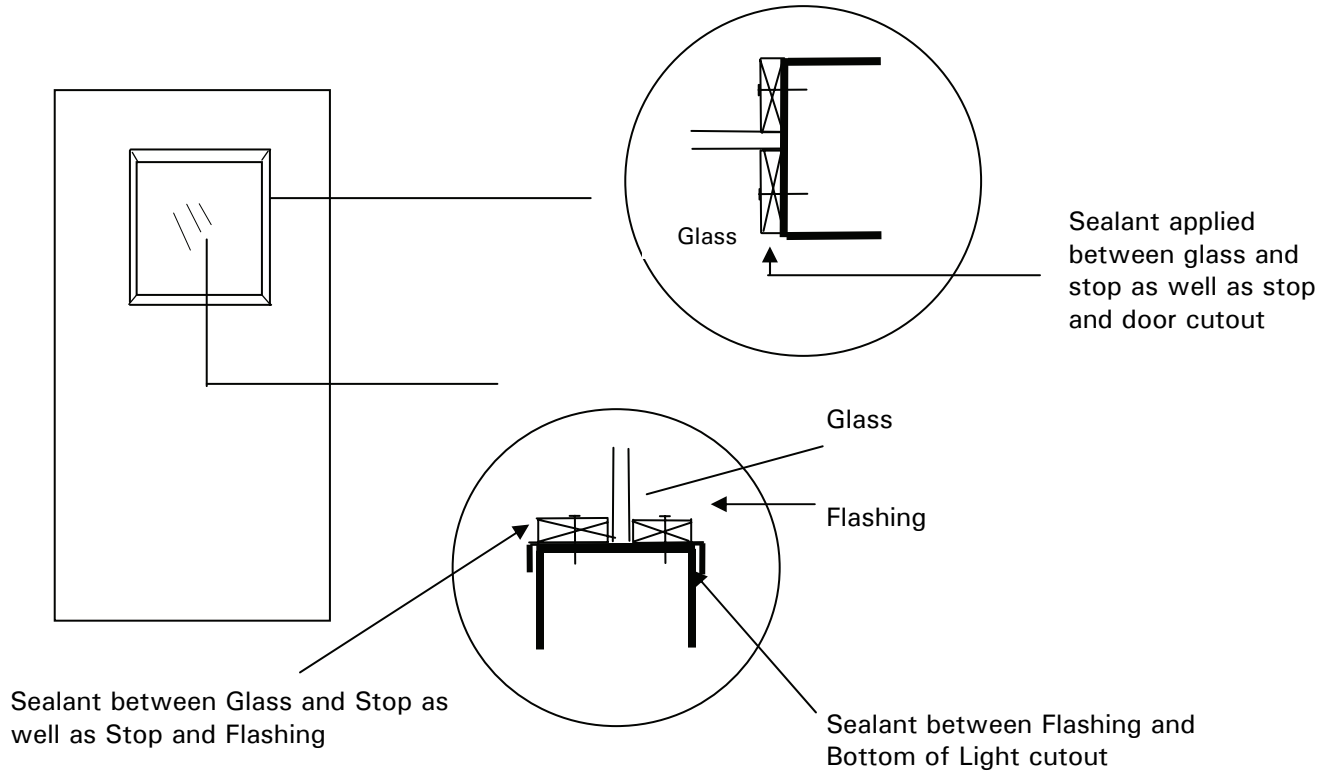

Note: Due to the intricacies and multiple options available, an all inclusive chart is impossible. For detailed information concerning specific applications, please contact the factory.  
 Phone 920-233-6161 or Fax to 1-800-782-1281.



Oshkosh, Wisconsin  
 920-233-6161  
 www.oshkoshdoor.com

Project Name \_\_\_\_\_

Location \_\_\_\_\_

Date \_\_\_\_\_ Job # \_\_\_\_\_ Page \_\_\_\_\_ of \_\_\_\_\_